Differential Pressure Gauge (with Switch)

Model No. MAGNETIC 2010 Series

SURFOR

MAGNETIC 2010





Safety Management

- Be sure to install a protecting device where exist abrupt change of pressure, vibration and pulsation.
- Do not give impact during the transportation, installation and usage.
- Be sure to install pressure gauge to be horizontal and vertical.
- Do not use it over than the limitation of switch capacity.

Purpose of Use

- Indicating, warning and controlling of differential pressure of air filter line such as dust collector, etc.
- Indicating, warning and controlling of differential pressure of differential pressure application line.
- Indicating, warning and controlling of extremely low pressure, vacuum and compound pressure line.

Summary

This gauge has a structure like MAGNETIC 2000 MODEL with contact signal. Therefore, it produces a warning signal by sending it to buzzer, bell, polot-lamp

Production Specification

- Diameter · 100mm
- Accuracy \cdot ±2.0% of Full Scale
- ► Scale Range $-0.25\sim0.25$ kPa $\sim-10\sim10$ kPa, $0\sim50$ kPa (* 1 kPa = 101.9716 mmH₂O)
- ▶ Working Pressure · Static pressure : 75% of Full Scale · Fluctuating pressure : 60% of Full Scale
- Working Temperature \cdot Ambient : - 10 \sim 60 °C

Product Specification

- + Case
 - · Aluminum(Hammer tone coating)
- + Cover Aluminum(Hammer tone coating)
- + Connection · PT ↔ 1/8(Female)
- + Type
 - BD-Type (Panel attachment type-Bracket)

+ Window · Poly Carbonate

+ Pointer · Aluminum

- · Pointer : Red color, Green color
- + Dial
 - · Aluminum
 - · White coating
 - · Black gradation and characters

+ Element

- · Silicon Rubber, NBR
- + Base Pressure 0.1 MPa
- + Switch
 - · Type : 2–SPDT (2 contact)
 - · Capacity of switch : 220V AC 10A
 - · Set up method : exterior
 - · Dead band : below 4 % of the total range

Differential Pressure Gauge (with Switch)

Model No. MAGNETIC 2010 Series


(35)

Ø113

Model No. | M- 2010 Bracket Type


Differential Pressure Gauge & Switch

essure Gauge

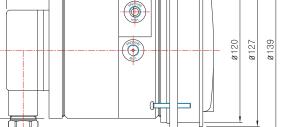


M

128

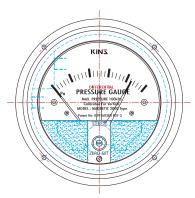

Connection diagram

1–Point

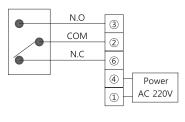

2–Point

